


Background

The enclosed monitor is pre-assembled with the monitor stand. The monitor stand will need to be removed and re-assembled with the provided bracket and screws shipped with the NC404TS and NC403TS. Please follow the disassembly and re-assembly instructions below.

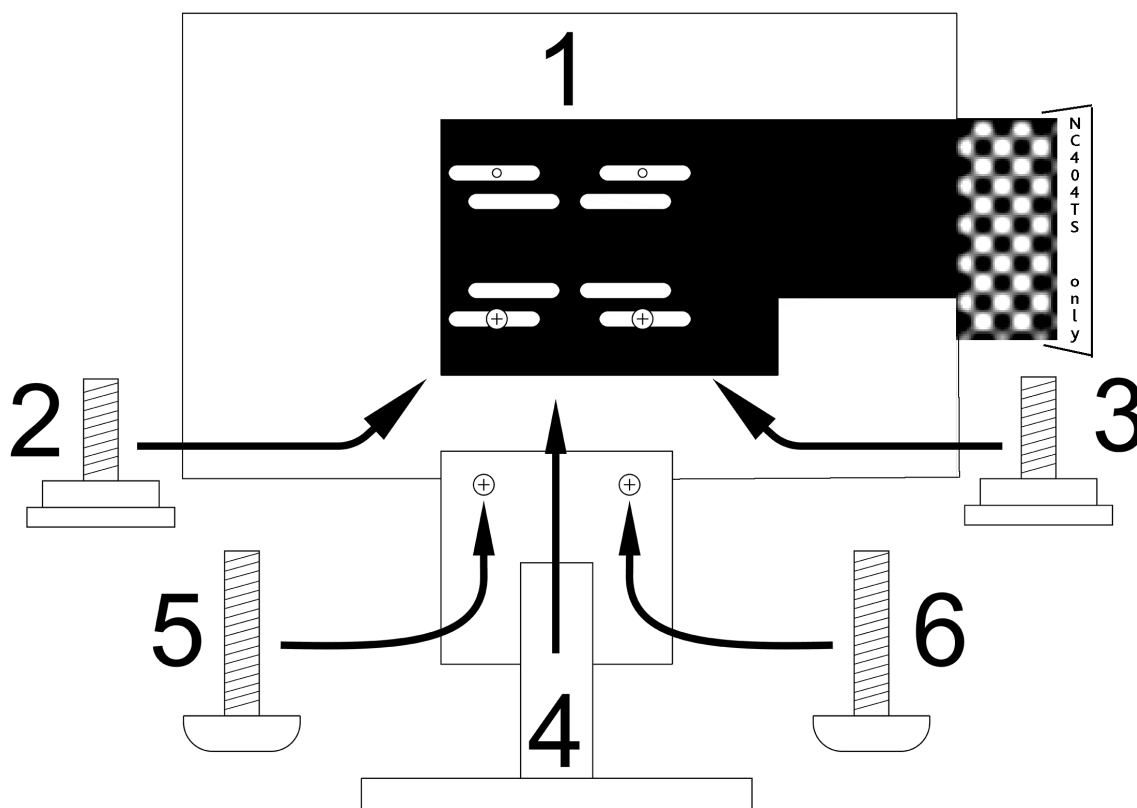

*Assembly shown with CL251 (NC404TS) bracket; the CL234 bracket is used with the NC403TS and does not include the checkered portion above.

Disassembly

Tools needed: phillips screwdriver

Monitor will lift free after removing two screws visible on the rear. Remove monitor from base. Remove (and retain) two black threaded standoffs (2 & 3) previously under base.

Re-assembly (sequence shown above)

Place monitor screen down on smooth, flat surface. Attach bracket (1) to monitor as shown, using black threaded standoffs (2 & 3). Attach base (4) to monitor and bracket using two M4 14mm screws provided by TekTone (5 & 6).