




CM800 Series Annunciator Specification Sheet

IL180
Section D
Rev. 14 - 03/2010

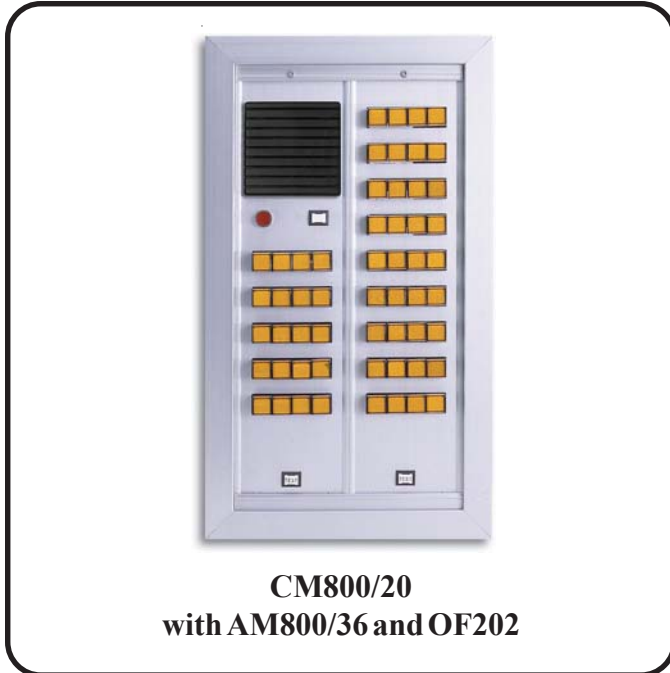

FEATURES

The CM800 Series Annunciators are modular panels, permitting use in systems requiring from 16 to 344 annunciator lamps. The CM800 is suitable for use in emergency call, security alarm, services monitoring, and similar applications where visual and audible annunciation is required. (If audible indication is not needed, specify when ordering.) Identification markings are easily applied by dry transfer letter method or label maker.

- Modular design
- Protected markings
- Multiple use
- Up to 4 digits per lamp
- Vertical or horizontal mounting

SPECIFICATIONS

Power Required: 16 to 24 VAC or VDC
 Connections: Screw terminals
 Housings: Flush mounting, OH200
 Surface mounting, OH300
 Lamps available only in multiples of four.

REQUIRED COMPONENTS

CM800 series	Tone Speaker Panel
AM800 series	Light Add-On Panel
PK2019	Annunciator Control Unit
SS Series	Transformer

ARCHITECTS' AND ENGINEERS' SPECIFICATION

The annunciator panel shall be TekTone® CM800 Series or approved equal. It shall be of extruded aluminum construction and contain a tone speaker panel with tone-off indicator light and button. The CM800 shall have a removable lens for lamp replacement access and to protect lamp identification markings. Screw terminals shall be provided for lamp wiring hookup.

Housing and Frame Chart for CM800

Number of Lamps	Flush	Width Cut-Out	Surface	Width Overall	Frame	Width Overall	Desk	Width
4 - 20	OH201	4-1/2"	OH301	6-1/8"	OF201	6-1/4"	IH302	9-1/2"
24 - 56	OH202	8-1/2"	OH302	10-1/8"	OF202	10-1/4"	IH302	9-1/2"
60 - 92	OH203	12-1/2"	OH303	14-1/8"	OF203	14-1/4"	IH303	13-1/2"
96 - 128	OH204	16-1/2"	OH304	18-1/8"	OF204	18-1/4"	IH304	17-1/2"
132 - 164	OH205	20-1/2"	OH305	22-1/8"	OF205	22-1/4"	IH305	21-1/2"
168 - 200	OH206	24-1/2"	OH306	26-1/8"	OF206	26-1/4"	IH306	25-1/2"

IH300 Series desk cabinets height: 6" depth: 17"
 OH200 Series wall cut-out height: 16-1/4" depth: 3-7/8"
 OH300 Series overall height: 17-3/4" depth: 3-5/8"
 OF200 Series overall height: 17-3/4" depth: 2-1/2"