




PM151/4 Door Station Adapter Specification Sheet

IL305
Section E
Rev. 10 - 04/2004

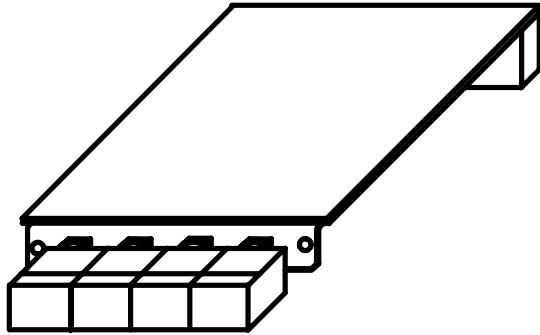

PM151/4 Module

ARCHITECTS' AND ENGINEERS' SPECIFICATION

The four-button Door Answering Module shall be TekTone® PM151/4 or approved equal. Each module shall permit connection of up to four 3-wire intercom stations and shall, when selected, allow two-way audio communication with a Tek-CARE® NC150N or Tek-CARE® NC200N Master Annunciator. Pushing a call button on a remote station shall light the respective annunciator selector button and shall sound an electronic tone every eight seconds. Depressing the selector button shall connect the remote station for audio communication. The master annunciator shall control the conversation using the talk button or optional handset.

FEATURES

The PM151/4 Door Station Adapter is specifically designed to work with the NC150N, NC200N Nurse Call Intercoms and is used to permit communication with remote speakers located at entrances, or at any location where local visual signaling is not required or desired.

Each PM151/4 will permit use of up to 4 remote stations. Calls from remote stations are indicated by tone and by lamp annunciation. Tone calling and communication to remotes is permitted by use of the NC150N, NC200N talk and call buttons.

- Modular Design
- Protected Markings (up to 4 digits per lamp)
- Easy Installation
- Push Button Operation
- Lamp and Call Tone Annunciation

SPECIFICATIONS

Dimensions:	Height:	0.75"	(19mm)
	Width:	3.5"	(89mm)
	Depth:	3.25"	(83mm)
	Projects:	0.5"	(13mm) from panel
Controls:	Push-push type switch, one per circuit.		
Power:	.03 Amp per lamp.		
Connection:	Screw terminals.		
Mounting:	Mounts on NC150N or NC200N Panel (order with NC150N or NC200N).		
Indicators:	Lamp indication.		
Markings:	Suitable for marking by stamping or dry transfer method.		

REQUIRED COMPONENTS

Tek-CARE® NC150N
-or-
Tek-CARE® NC200N Nurse Call Systems

www.tektone.NET