




PK2019 Annunciator Control Unit Specification Sheet

IL310
Section D
Rev. 12-08/2010

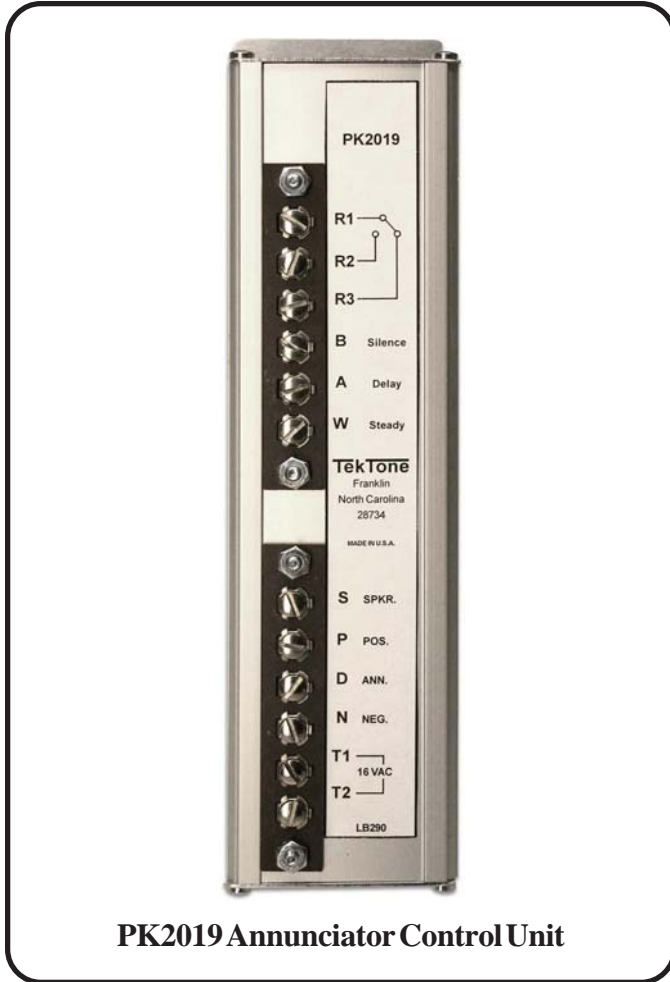

PK2019 Annunciator Control Unit

FEATURES

The TekTone® PK2019 Annunciator Control Unit is a general purpose annunciator control unit that is used with the CM800 Emergency Call System and the DS100 Door Sentry System. The PK2019 provides tone signal, tone silencing, tone-silenced indication, auxiliary signal relay, and 24 VDC for accessory device operation.

SPECIFICATIONS

Dimensions: Height: 9.5" (242mm)
 Width: 2.375" (61mm)
 Depth: 2.25" (58mm)

Power Required: 16 VAC 30 VA max.
 Output Current: 1 Amp. maximum
 Tone Speaker: 45 ohms (up to 3 in parallel)
 Tone-Off Lamp: .04 Amp. (up to 3 in parallel)
 Connections: Screw terminals

REQUIRED COMPONENTS

SS106	Transformer
CM800 Series	Annunciator Panel
-or-	
DS100 Series	Speaker Panel

ARCHITECTS' AND ENGINEERS' SPECIFICATION

The annunciator control unit shall be TekTone® PK2019 or approved equivalent. It shall be used with the CM800 Emergency Call System and the DS100 Door Sentry System. The PK2019 shall be capable of generating either a steady or intermittent alarm tone.

Screw terminals shall be provided for connections. The control unit shall be of rugged construction and modular integrated circuit design.

www.tektone.com

277 Industrial Park Road • Franklin, NC 28734 • tektone@tektone.net
 Phone: (828) 524-9967 • Fax: (828) 524-9968 • Tech Support: Choose option 2 • Sales: Choose option 3
 TekTone®'s quality system is registered by UL® to the ISO 9001 standard. (Reference #10001510.)