

### Features

- Push-button calling
- Call-placed indicator
- In-use indicator when intercom audio path is active
- Reset button
- Sensitive speaker/microphone
- Durable flame retardant (UL® 94V-0) plastic panel
- May be used as a retrofit for the IR150N station with IH106N back box; requires two CL207 mounting adapters

### Description

The IR150B Staff Station provides for efficient use of the nursing staff by permitting fast reliable communication.

Used with TekTone's Tek-CARE® NC200 and NC150 nurse call systems, the IR150B provides reliable two-way, handsfree communication between the nurse master station and utility room, examination rooms, kitchen, or any other location where staff members may need to originate calls. Calls are placed by use of a momentary push button. Solid-state indicators on the panel indicate that a call has been placed and that the intercom is in use.


### Listings



UL 1069 Listed; UL® File Number E71599.

### Specifications

Dimensions:	4.5"H × 6.375"W × 2.375 "D (114 mm × 162 mm × 60 mm)
Construction:	Flame-retardant (UL® 94V-0) plastic
Speaker:	2.5" × 2.5"
Connections:	Plug-in type
Housing:	Steel City #H3BD with Steel City #3GC plaster ring, or TekTone #IH353 box with IH352 ring, or equal, or if a smaller box is needed, use ARC-CO #2GB with ARC-CO #3GC ring. Horizontal mount

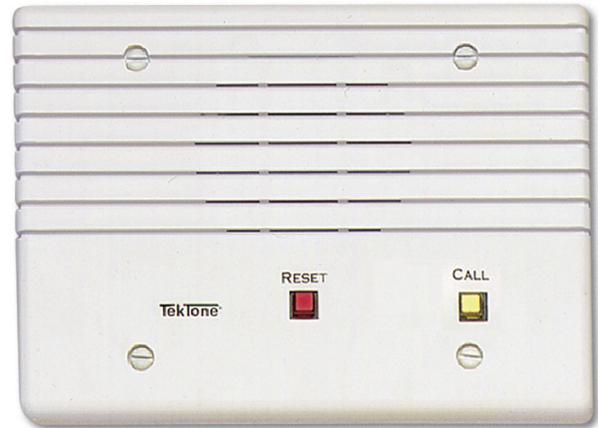

IR150B Staff Station

### Required Components

Tek-CARE NC150 or NC200 Nurse Call System