




SF502ES Wall-Mounted Call Transmitter Specification Sheet

IL806
Section E
Rev. 4 - 12/2009

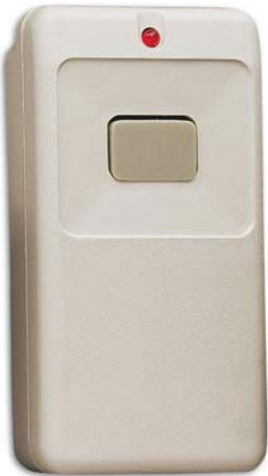

SF502ES

ARCHITECTS' AND ENGINEERS' SPECIFICATION

The wall-mounted call transmitter shall be TekTone® SF502ES or approved equal. It shall use the 900MHz frequency for signal transmission and shall include a transmission indicator LED. No physical wiring connections shall be required to transmit a call. The transmitter shall also include a neck chain and a 3V lithium battery. The transmitter shall be no larger than 3"×1.6"×0.72".

FEATURES

The SF502ES Wall-Mounted Call Transmitter is for use as a call button or check-in button with the Tek-CARE®500 Wireless Emergency Call System. The SF502ES Transmitter has a sleek, smart design with simple, single-button activation. The SF502ES requires no wiring connections and operates on the 900 MHz frequency.

The LED flashes on all transmissions, including supervision, so the user has a visual signal that the unit is transmitting. The transmitter can be supervised. It can be easily mounted for fixed position signaling, and also includes a neck cord for use as a pendant. The 3V lithium battery is user replaceable.

- Fully supervised Wireless 900MHz transmitter.
- Large alarm button with alarm activation delay.
- Low battery warning before battery depletion.
- Flashing LED indicator during all transmissions.
- Field-replaceable 3V lithium battery.

SPECIFICATIONS

Dimensions: 3"H × 1.6"W × 0.72"D
(76 mm × 41 mm × 18 mm)

Weight: 1.7 oz.

Battery: 3V Lithium (BA502)

REQUIRED COMPONENTS

Tek-CARE®500 Wireless Emergency Call System

TekTone® has designed Tek-CARE®500 to work as a system. Its master station computer has been carefully designed and matched to work with Tek-CARE®500 wireless and wired peripherals. TekTone® will not warrant or support components of Tek-CARE®500 that are purchased separately unless the components are add-ons to previously sold systems. TekTone® will also not warrant or support a system that is a mix of TekTone® and Non-TekTone® parts, unless prior permission has been obtained. A site survey must be performed and submitted before ordering a Tek-CARE®500 system. In order to track our systems and to inform facilities of software upgrades, full site information (site name, address and phone number) will be required when ordering. Site information and master station computer warranty numbers will also be required when requesting technical support.

www.tektone.com

277 Industrial Park Road • Franklin, NC 28734 • tektone@tektone.net

Phone: (828) 524-9967 • Fax: (828) 524-9968 • Tech Support: Choose option 2 • Sales: Choose option 3
TekTone®'s quality system is registered by UL® to the ISO 9001 standard. (Reference #10001510.)