

# TekTone®

COMMUNICATIONS FOR TODAY ... AND TOMORROW.

## Tek-CARE® 500

wireless nurse call system

DESIGNED TO BE  
WIRELESS & MOBILE



### AUTONOMY



Wireless pendants provide residents with the security they need without being confined to their room. The modern-looking devices also offer a less institutional feel for more resident comfort.

### RETROFIT



The condition of existing wire is not a factor when utilizing wireless technology. Wireless devices can be installed throughout a facility regardless of electrical infrastructure.

### INTEGRATION



Seamlessly integrates with other hardwired technology while blending into a residential environment. Other nurse call systems, fire alarm, and security can all send alerts to one convenient place.

# Tek-CARE<sup>®</sup> 500

wireless nurse call system

Tek-CARE<sup>®</sup>500 is a UL<sup>®</sup>2560 Listed wireless nurse call system that ensures reliable call transmission using spread spectrum technology. Tek-CARE500 provides senior living facilities with the most advanced security and safety available, giving your clients the peace of mind and independence they deserve.

Tek-CARE500 includes a complete selection of wireless call transmitters—including:

- pendants
- emergency stations
- check-in stations
- door and window monitors
- motion detectors for automatic up and about notification




All devices are powered by batteries that can last up to one year. Plus, all transmitters are supervised, so you always know your system is working.



Residents wear waterproof pendants around the neck or on the wrist, allowing them the freedom to roam throughout your facility or campus knowing that help is always just a button press away. Place wireless emergency switches in baths and bedrooms for additional call locations.

Enhanced Location for the Tek-CARE500 system communicates through RF signals, which provide a more detailed scope to determine where a pendant has placed an emergency call within a facility.

NOTE: The approximate location is within a 40' radius in all directions. Enhanced Location is currently applicable for single- and multi-floor facilities as a convenience feature, not a UL Listed feature of the system. The facility must have at least three repeaters within the area that will be using enhanced location.

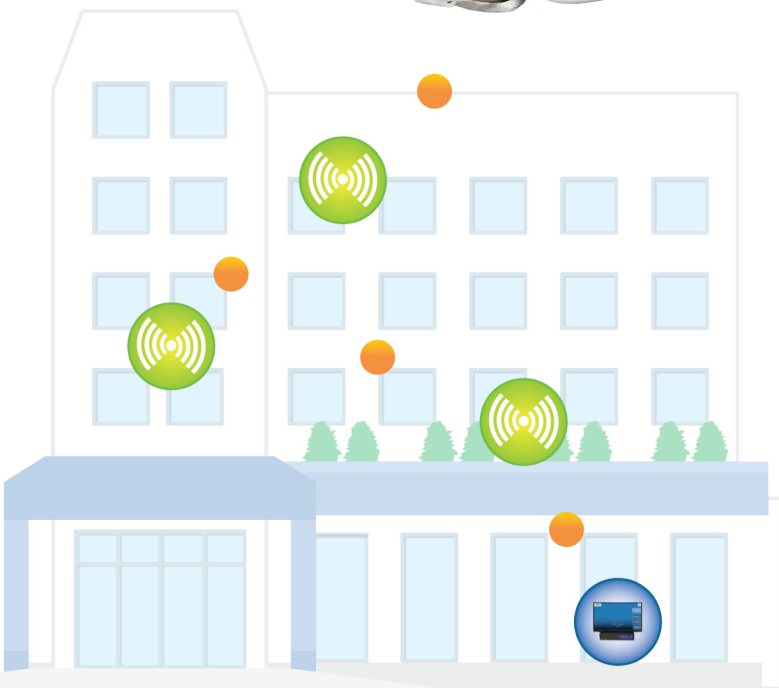



# Tek-CARE®500 Components



pendant transmitters



Tek-CARE Appliance Server  
(NC475DESK pictured)



pager



check-in/assistance station



motion detector

universal  
contact  
transmitters



patient  
station



receiver



repeater/locator

TekTone warrants its Tek-CARE500 equipment to be free from defects of material and workmanship under normal use and service for a period of three years from date of delivery.



Tek-CARE® Staff App for iPhone, iPad, iPod touch and Android devices, and Tek-CARE App for Apple TV®

Your TekTone® Dealer



TekTone's quality system is registered by DQS to the ISO 9001:2015 standard. (Reference #10001510.)  
324 Industrial Park Road • Franklin, NC 28734 • [tektone@tektone.com](mailto:tektone@tektone.com)  
Phone: 800.327.8466 or 828.524.9967 • Sales: option 2 • Tech Support: option 3  
[www.tektone.com](http://www.tektone.com)



TekTone® has designed Tek-CARE®500 to work as a system. Its Tek-CARE® Appliance Server has been carefully designed and matched to work with Tek-CARE500 wireless and wired peripherals. TekTone will not warrant or support components of Tek-CARE500 that are purchased separately unless the components are add-ons to previously sold systems. TekTone will also not warrant or support a system that is a mix of TekTone and non-TekTone parts, unless prior permission has been obtained. A site survey must be performed and submitted before ordering a Tek-CARE500 system. In order to track our systems and to inform facilities of software upgrades, full site information (site name, address and phone number) will be required when ordering. Site information and Tek-CARE Appliance Server warranty numbers will also be required when requesting technical support.