

TekTone®

COMMUNICATIONS FOR TODAY ... AND TOMORROW.



Tek-CARE® 30011 nurse call system

plus *Tek-CARE® 500* wireless nurse call

Tek-CARE® 300II
plus
Tek-CARE® 500

Add Wireless Nurse Call to Your Existing Tek-CARE® 300II Nurse Call System

TekTone's reliable Tek-CARE® 300II UL®1069 listed nurse call system now has a new capability—wireless nurse call integration. Our Tek-CARE® 500 UL®2560 listed wireless nurse call system is powerful and reliable, and can be seamlessly integrated with existing Tek-CARE 300II installations to provide new and powerful capabilities.

The wireless nurse call add-on uses reliable EchoStream wireless technology to ensure that critical nurse call messages are transmitted quickly and efficiently from the end devices to the Tek-CARE® nurse call system. Added features include:

- Pendant transmitters, wireless room stations, wireless check-in stations, and more.
- Locatable mobile wireless devices
- Tek-CARE® Appliance Server displays all events from both systems simultaneously
- Remote event monitors installed on facility PCs also display all events
- Management reporting software from any networked computer
- Available integration with email, smart phones and pagers
- Available integration with other building systems, such as fire alarm and security systems

The core component of wireless device integration is the Tek-CARE® Appliance Server, a specially designed nurse call server that runs the required software and provides the needed communication ports to connect both wireless hardware and the hardwired Tek-CARE 300II nurse call system.

Add wireless nurse call capability to your Tek-CARE 300II system — call TekTone® at 800.327.8466 option 2, and speak with a knowledgeable sales representative.



Wireless Devices



Adding the Tek-CARE®500 to your Tek-CARE300II allows you to provide wireless pendant transmitters to residents—giving them the independence they desire.

Wireless check-in/assistance stations or motion detectors can replace morning up-and-about rounds, saving staff valuable time.



Seamless Integration

Tek-CARE®500 includes our proprietary Tek-CARE® Appliance Server, which displays calls from wireless devices, as well as all activity from connected Tek-CARE300II systems.

Plus, up to nine networked PCs can use our remote event monitor software to monitor all activity via the facility's LAN. (Tek-CARE500 includes a license to install one remote event monitor; additional licenses may be purchased.)

With the addition of a TekTone® paging system, Tek-CARE® Appliance Server automatically sends text messages to staff pagers and email addresses in response to events from both the Tek-CARE300II and Tek-CARE500 systems.



Management Reporting

Tek-CARE® Report

Date Created: 03/25/2014 15:43:45
 Database: TekCare Reporting
 Date Range: 03/19/2014 15:46:00 - 03/25/2014 15:46:00

Call Types:
 Alarm
 Bath
 Code Blue
 Emergency
 I1 Present
 I2 Present
 Routine

Matching Events: 77 out of 54177


Summaries
 show all sections | hide all sections | show all graphs | hide all graphs

Overall Summary
 hide section

Search:

Event Type	Occurrences	Min Response	Avg Response	Max Resp
Alarm	27	0:01	0:38	
Bath	2	0:04	1:40	
Code Blue	5	0:03	0:43	
Emergency	13	0:04	0:56	
I1 Present	7	0:24	1:51	
I2 Present	2	1:48	2:30	
Routine	21	0:03	0:47	
Totals	77	0:01	0:48	

show graph

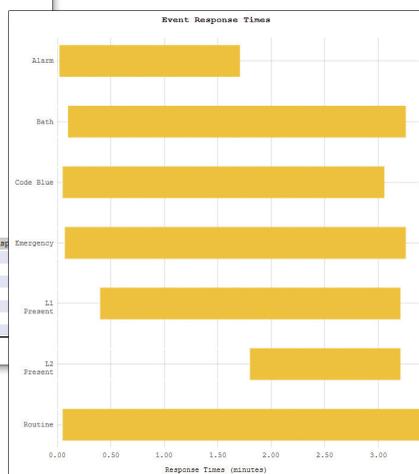

Using the Tek-CARE® Appliance Server, create activity reports for all connected systems. Reports can be filtered by device, time and day, location and event type, and are easily exported to a spreadsheet. Administrative team members can create reports from any computer on your facility's network. Reports can also be created and emailed to selected recipients automatically.

Tek-CARE®300II & Tek-CARE®500 Components

master station
with built-in monitor



Tek-CARE Appliance Server with
Tek-CARE300II and Tek-CARE500
software, plus Event Monitor
and Reporting software modules



single bed station



oxygen-safe
pillow
speaker



oxygen-safe
call cord



pushbutton
call/check-in



wireless
check-in/assistance



pull-cord
station



waterproof
emergency switch



code
switch



wireless
emergency



call pendants



wireless
bed
station



staff station



nurse/aide
presence switch



pager
(appearance
may vary)



motion
detector



smoke
detector



duty station



corridor dome light

Your TekTone® Dealer



TekTone's quality system is registered by UL® to the ISO 9001 standard. (Reference #10001510.)

324 Industrial Park Road • Franklin, NC 28734 • tektone@tektone.net
Phone: 800.327.8466 or 828.524.9967 • Sales: option 2 • Tech Support: option 3
www.tektone.com

