




AM190/12, AM190/22 Apartment Entry Add-On Panels Specification Sheet

IL317
Section A
Rev. 10-08/2010

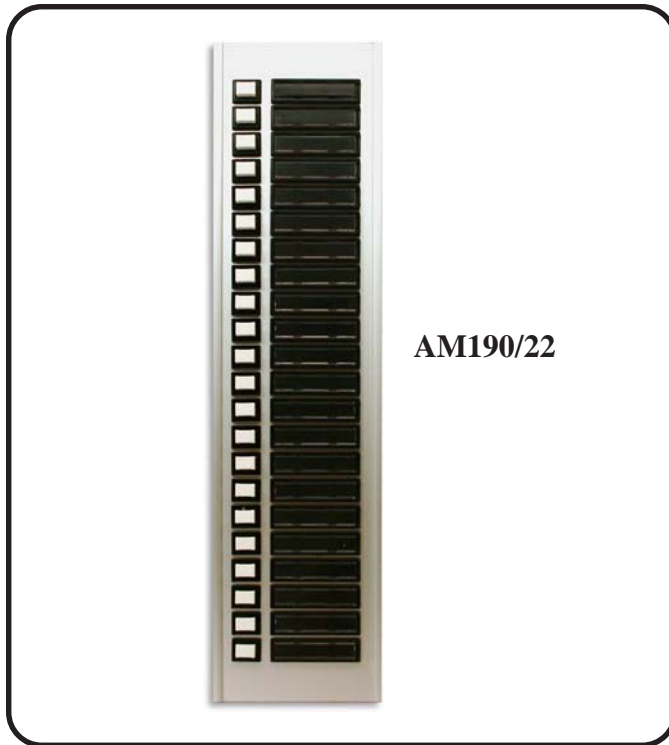

AM190/22

ARCHITECTS' AND ENGINEERS' SPECIFICATION

The push button add-on apartment entry panel shall be TekTone®'s AM190/12 or AM190/22 or approved equal.

Push button switches shall be individually replaceable with self-wiping contacts. The name holders shall be made of black flame retardant polycarbonate plastic with clear flame retardant polycarbonate plastic strips to protect card inserts. Each name holder shall snap into two small slots on the panel itself and shall be individually replaceable.

Each AM190 Panel shall be supplied with name card sheets that may be easily separated into individual name strips. Name strips shall be inserted into name holders without the use of tools.

The panel shall be flush or surface mounted and shall be finished in brushed aluminum.

FEATURES

AM190/12 and AM190/22 Push Button Add-On Panels are specifically designed for use with TekTone®'s AM192 and AM193 Series speaker panels.

For entrance panels that require contact with more than 18 apartments, an AM190/12 or AM190/22 is required. The specific model depends upon the number of additional apartments to be called.

- Modular design
- Individually replaceable name holders (black flame retardant polycarbonate plastic)
- Easily accessible
- Simple installation

SPECIFICATIONS

Dimensions: Height: 16.5" (375mm)
Width: 4" each panel (100mm)

Push Buttons: Individually replaceable type with self-wiping contacts.

Construction: Modular, extruded anodized aluminum panel.

Mounting: OH190 series housing for flush mounting.
OF190S series frame for surface mounting.

REQUIRED COMPONENTS

AM192 series	Speaker Panel
IR series	Apartment Remote Station
PK543A	Amplifier
<i>-or-</i>	
AM193 series	Speaker Panel
TA205B	Handset Apartment Station
PK205	Amplifier
<i>-plus-</i>	
OF190 series	Frame
OH190 series	Housing
SS series	Transformer

www.tektone.com

277 Industrial Park Road • Franklin, NC 28734 • tektone@tektone.net
Phone: (828) 524-9967 • Fax: (828) 524-9968 • Tech Support: Choose option 2 • Sales: Choose option 3
TekTone®'s quality system is registered by UL® to the ISO 9001 standard. (Reference #10001510.)