




Tek-CARE®NC200 Series Nurse Call System Specification Sheet

IL364
Section E
Rev. 11-08/2010

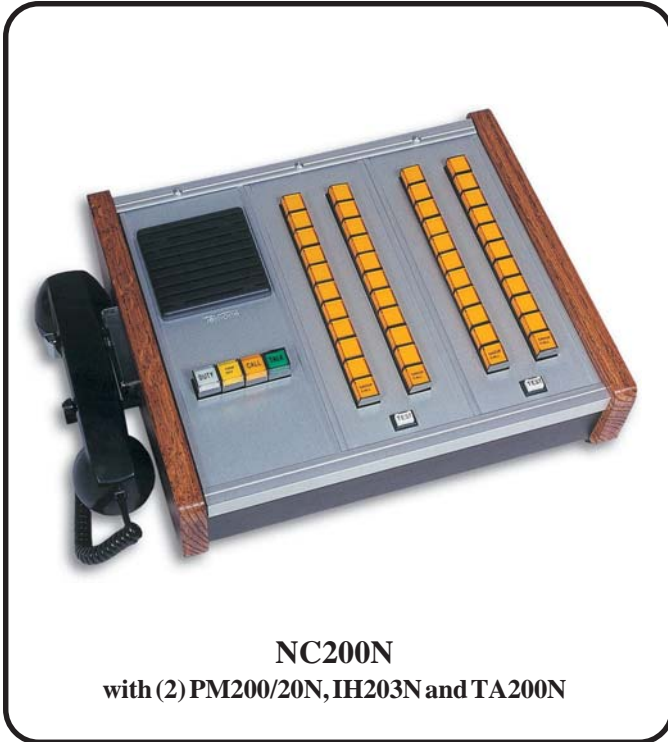

NC200N
with (2) PM200/20N, IH203N and TA200N

ARCHITECTS' AND ENGINEERS' SPECIFICATION

The master station shall be TekTone® Tek-CARE® NC200 series or approved equal, with push button controlled circuits and indicator lights for Talk, Call, Nurse Follow and Tone-Off. The master shall also include 10-station group paging. Indicator lights shall have removable lenses for lamp replacement and to protect identification markings. The master station shall include the system amplifier. A speaker shall be provided for audio signals and voice communication. Screw terminals shall be provided for wiring installation. The station shall be of modular construction.

The NC200 series shall be UL® 1069 Listed.

FEATURES

The basic Tek-CARE®NC200 series Audio/Visual Nurse Call System consists of patient calling stations; emergency call stations; a master intercom/annunciator station including amplifier, dome lights, and zone lights; and reliable, solid-state control and power supply equipment. The flexible, modular design permits simple, customized installation.

Emergency signals are distinctively identified by a rapid pulsating of all visual and audible signals associated with the calling station. If routine and emergency calls are present simultaneously, emergency signaling is given precedence. Emergency audible signals can only be canceled at the point of origin.

Sensitive two-way voice communication, Nurse Follow, Tone-Off, Tone Call, and Group Call functions are push button selected.

Optional equipment is available to provide for staff stations, duty stations, remote visual annunciator, master handset, and a third priority level annunciation.

- UL® 1069 Listed
- Routine audible-visual signaling
- Emergency audible-visual signaling
- Voice communication and monitoring
- Push button operation
- Nurse follow and group call features
- Compact modular design for desk mounting
- Integrated circuit technology

REQUIRED COMPONENTS

NC200 series	Master station panel
PM200/20N	20-station selector add-on module with test button
IH200 series	Desk housing
IH151NK	Power and control unit, transformer

www.tektone.com

277 Industrial Park Road • Franklin, NC 28734 • tektone@tektone.net
Phone: (828) 524-9967 • Fax: (828) 524-9968 • Tech Support: Choose option 2 • Sales: Choose option 3
TekTone®'s quality system is registered by UL® to the ISO 9001 standard. (Reference #10001510.)