




# Wiring Diagram for LI484LED 4-LED Dome Lamp

for the Tek-CARE®NC300II Nurse Call System

IL885  
Section E  
Rev. 0-02/2009

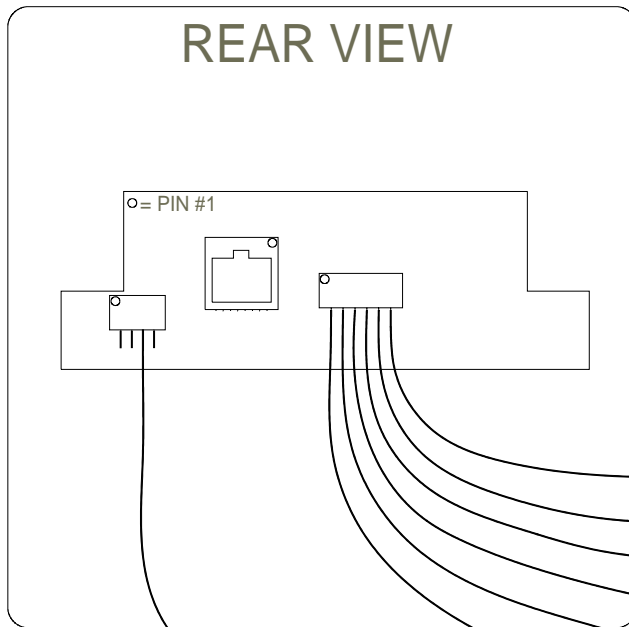

FOR USE WITH NC300II	
WIRE COLOR (FUNCTION)	
—	BLUE (LAMP FAULT) **
—	GREEN (RED DOME)
—	YELLOW (GREEN DOME)
—	ORANGE (AMBER DOME)
—	RED (WHITE DOME)
—	BROWN ("P" / +24VDC)
—	BLACK (NEGATIVE)

\*\* IR300-series PIN 6 ON 15 PIN HEADER  
SF380A PIN 7 ON 8 PIN HEADER

IL715 IL843 LI484LED CONNECTIONS REV0 121908.dc

Copyright © TekTone Sound & Signal Mfg., Inc. All Rights Reserved.

[www.tektone.NET](http://www.tektone.NET)

277 Industrial Park Road • Franklin, NC 28734 • Phone (828) 524-9967 • Fax (828) 524-9968  
Email: [tektone@tektone.net](mailto:tektone@tektone.net) • Technical Assistance Email: [teksupt@tektone.net](mailto:teksupt@tektone.net)  
TekTone®'s quality system is registered by UL® to the ISO 9001:2000 standard. (File #A10766.)