

Features

- Hands-free loud-speaking
- Weather-resistant Mylar speaker
- Self-wiping push button switches
- Decorative end caps
- Individually replaceable name holders
- Slim-line surface-mount option
- Simple installation

Description

The AM612-series Entrance Panel is for use with TekTone® loud-speaker type suite stations.


Panels are equipped with a weather-resistant Mylar speaker protected by a black flame retardant polycarbonate plastic grill.

The anodized aluminum panel is available in two sizes. The 4.75" × 11.25" panel accommodates from 2 to 8 push buttons, and the 4.75" × 17.25" panel is used for applications requiring from 10 to 16 push buttons.

The speaker panel can accommodate up to 16 push buttons. In addition, the panel also contains up to 16 name holders with plastic lenses that snap easily into the panel and are individually replaceable.

Specifications

Dimensions:	Height:	11.25" or 17.25"
	Width:	4.75"
Push button:	Individually replaceable type with self-wiping contacts	
Speaker:	2.5" (64 mm) voice frequency response	
Construction:	Anodized extruded aluminum panel	
Housings, flush:	OH600 Back box for 2-8 buttons OH601 Back box for 10-16 buttons	
Surface mount:	Add "S" to panel part number (example: AM612/08S)	
Name holders:	2.125" × 1.0625"	

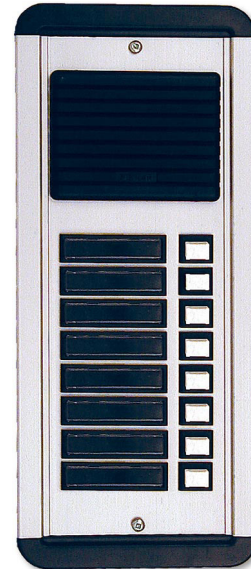

AM612-series Entrance Panels

Required Components

IR100-series or IR200-series Apartment Stations
PK543A Apartment Intercom Amplifier
SS102A Transformer
OH600 or OH601 Back Box (for flush mounted models)