

Features


- Meets ADA requirements (check local codes for additional requirements)
- Audible and visual annunciation
- Voice communication and monitoring
- Push button operation
- Sensitive speaker/microphone
- Solid-state circuitry

Description

The Tek-SAFE® NC150R Area of Rescue Assistance System provides communication between areas of rescue assistance (in protected stairwells) and the building lobby. Calls are indicated at the NC150R master station by both visual and audible signals. The master station also has talk, call and selector push buttons for two-way communication with up to eight IR150SS series remote call stations. (Larger masters are available.)

Specifications

Dimensions:	Height:	13.25"	(337 mm)
	Width:	6.25"	(159 mm)
	Depth:	4.25"	(108 mm)
Housing Cutout:	Height:	11.625"	(295 mm)
	Width:	4.4375"	(113 mm)
Construction:	Rugged extruded aluminum		
Connections:	Screw terminals		

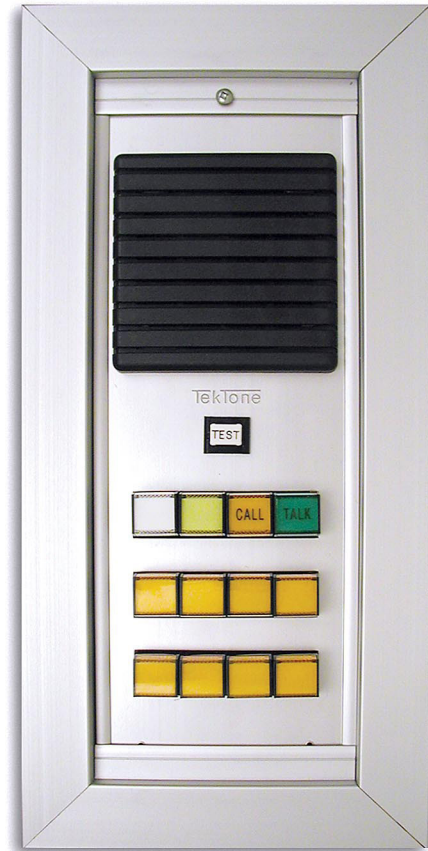

NC150R Master Station Panel

Required Components

- NC150R Master Station Panel
OH150 Flush Mount Housing
IR150SS-series Remote Call Stations
IH151NK Junction box with:
- PK151A Power & Control Unit
 - SS106 Transformer, 24 VAC