

Description

The TekTone® PK2019A Power & Control Unit is a general purpose power & control unit used with the CM800 Emergency Call System and the DS100 Door Sentry & Emergency Alarm System.

The PK2019A provides tone signal, tone silencing, tone-silenced indication, auxiliary signal relay, and 24 VDC for accessory device operation. The PK2019A also provides three levels of tone volume control.

Specifications

Dimensions: Height: 5.5" (140 mm)
Width: 3.125" (80 mm)
Depth: 2.0" (51 mm)

Power Required: 16 VAC 30 VA max.

Output Current: 1 Amp. maximum

Tone Speaker: 45 ohms (up to 3 in parallel)

Tone-Off Lamp: 0.04 Amp. (up to 3 in parallel)

Connections: Plug-in

Construction: Flame-retardant (UL® 94V-0) plastic


Required Components

CM800 Emergency Call System

-or-

DS100 Door Sentry & Emergency Alarm System

SS106 Transformer

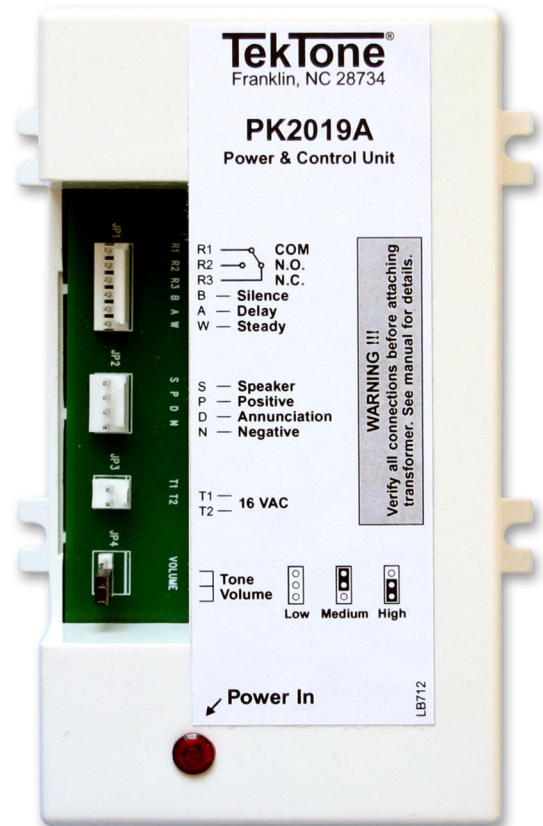

PK2019A Power & Control Unit