

### Features

- General purpose power and control unit
- Three levels of tone volume


### Description

The TekTone® PK2019A Power and Control Unit is a general purpose power and control unit used with the CM800 Emergency Call System and the DS100 Door Sentry & Emergency Alarm System.

The PK2019A provides tone signal, tone silencing, tone silenced indication, auxiliary signal relay, and 24 VDC for accessory device operation. The PK2019A also provides three levels of tone volume control.

### Specifications

Dimensions:	5.5"H × 3.12"W × 2"D (140 mm × 80 mm × 51 mm)
Power:	16 VAC 30 VA max
Output:	1 Amp. maximum
Tone Speaker:	45 ohms (up to 3 in parallel)
Tone Off	0.04 Amp. (up to 3 in parallel)
Lamp:	
Connections:	Plug-in
Construction:	Flame retardant (UL® 94V-0) plastic

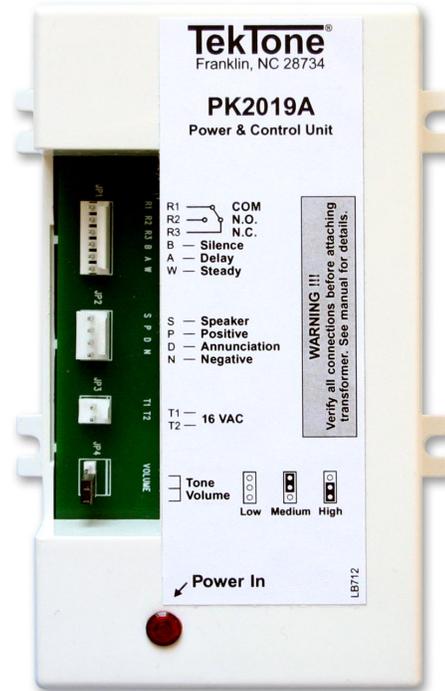

PK2019A Power and Control Unit

### Required Components

CM800 Emergency Call System  
or  
DS100 Door Sentry & Emergency Alarm System  
  
SS106 Transformer